

# Tennis

## Console Operating Instructions



Model TN-1 and TN-2 Tennis Keyboard

### SET UP

Set up the scoreboard as described in the Scoreboard Installation and Service Manual.

Plug the data cable from the scoreboard into the jack on the right side of the console.

If you will be using the microphone, plug the microphone cable into the jack on the left side of the console.

### SCORING A MATCH

Press the green TOP SCORE +1 or the BOTTOM SCORE +1 buttons to record and display each side's score. Each time the button is pressed, that side's game score is increased by one increment (the sequence is 0, 15, 30, 40, A).

Use the green TOP SCORE -1 and BOTTOM SCORE -1 buttons to decrease the game score by one increment if necessary.

### **Tie Break**

In the case of a tie, use the yellow buttons at the bottom of the console. Press the TIE BREAK ON key to start the tie break. Then press the TIE BREAK OFF (Resume Normal Play) key when the tie break is over.

### **End of Set**

At the end of a set, press the orange TOP SET +1 or BOTTOM SET +1 button to indicate the winner of that game. Up to 9 games per set can be displayed. To edit an incorrect set score, continue to press this key until you have cycled through to the correct number.

Press the green TOP SCORE 0 and BOTTOM SCORE 0 buttons to reset the game score to zero.

Press the green NEXT SET button when ready to begin the next set. (Use the PREV SET button to go back a set if needed.)

If you want to clear all set scores, press the yellow ZERO SET SCORES button.

## **OTHER FUNCTIONS & BUTTONS**

### **VOLUME**

The two yellow volume keys adjust the PA volume for the microphone or sports tunes up or down. Each time you press the key, the LCD console display indicates the relative power level of the PA. (Setting 1 is the lowest level and 16 is the highest level.)

Press the ARROW UP key to raise the volume level. Press the ARROW DOWN key to lower the volume level.

When held down, the level steps up (or down) until maximum (or minimum) level is attained.

### **Sports Tunes**

The orange numeric keys are used to play sport tunes. Press the corresponding numeric key to play a particular sport tune. For example, to play "CHARGE," press the "1;" to play "FIRST CALL," press the "4."

Use the orange C/E (Clear Entry) key to terminate a sports tune if needed while it is playing.

### **PA Operation**

Every COLORADO scoreboard system includes a built-in public address amplifier, 40-watt weatherproof speaker, and a hand-held microphone. The microphone plugs into the jack on the left-hand side of the operator's console. Volume is controlled by the VOLUME UP/ VOLUME DOWN keys.

To announce over the PA system, hold the microphone close to your mouth, depress the button on the microphone and speak clearly into the microphone.

### **ON/OFF**

Press the yellow ON/OFF button to blank scoreboard. Press it again to turn scoreboard display ON. This key controls only what shows on the display. Electrical power remains on at the scoreboard and is unaffected by this key.

### **TEST**

Press the yellow TEST key to check or test the scoreboard. The scoreboard sequentially displays "8's" until all digits have turned on. Several seconds later, the scoreboard display returns with the same data displayed originally. The console LCD displays 8888 throughout the test.

### **DUAL SCBD SYNC**

[Dual Scoreboard Synchronization] This yellow key is used when you are operating two or more separate scoreboard displays from the same operator's console. After all scoreboard connections have been made and electrical power applied to the scoreboards, press this key once. The scoreboards will now be synchronized.

### **Keys not used**

The Time of Day and Enter keys are not used in Tennis.

If you have any questions regarding the operation of this or any Colorado Time Systems equipment, please call our Customer Service Representatives at (970) 667-1000, x256 or toll-free in the U.S. and Canada at 800-287-0653 x256.



[www.coloradotime.com](http://www.coloradotime.com)  
1551 East 11th Street, Loveland, CO 80537  
Phone: 970-667-1000 x256 Fax: 970-667-1032  
800-287-0653 x256