

# Wireless Pro Pace Clock and Shot Clock



## User Guide



F904 Rev. 1106

## Colorado Time Systems

Corporate Office  
1551 East 11th Street  
Loveland, CO 80537 USA

Sales: 1-800-279-0111 or +1 970-667-1000

Service: 1-800-287-0653 x256 or +1 970-667-1000 x256  
FAX: 970-667-1032

Web: [www.coloradotime.com](http://www.coloradotime.com)  
Email: [customerservice@coloradotime.com](mailto:customerservice@coloradotime.com)

### FCC Compliance Statement for Wireless Pace Clock/Shot Clock

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Unauthorized modifications or changes made to this device not expressly approved by the party responsible for compliance voids the user's authority to operate the equipment.

# Table of Contents

<b>1</b>	<b>Introduction</b>	
	How to Set Intensity, Channel and Mode .....	1
	Intensity .....	1
	Channel .....	2
	Mode .....	2
	Physical Connections .....	2
	Scoreboard/Training .....	3
	Input Modes .....	3
	Antenna .....	4
	Battery .....	4
	Horn .....	4
	Legs .....	4
<b>2</b>	<b>Pace Clock Operation</b>	
	Standalone Pace Clock .....	5
	Pace Clocks in Series .....	5
	Wireless Operation .....	5
	Connected by Data Cables .....	5
	With Timer or Controller .....	6
<b>3</b>	<b>Water Polo Operation</b>	
	Physical Setup .....	7
	Displaying Information .....	7
	Shot time .....	8
	Game time .....	8
	Time out time .....	8
	Team scores .....	8
	Time of day .....	8
<b>4</b>	<b>Training Modes</b>	
	Lap counter .....	9
	Simple Pace Clock .....	10
	Pace clock with Cumulative Splits .....	10
	Pace clock with Lap Splits .....	11
	Relay Exchanges .....	11
	Start Reaction .....	12
	Turn Speed .....	12

Breakout Time .....	13
Start Reaction and Breakout Time .....	13
Single Lane Timer .....	14
Mid-Race Timing.....	16
Test Mode .....	17

## **5 Scoreboard Modes**

Physical Setup.....	19
Swimming .....	20
Lane Times.....	20
Event/Heat .....	20
Training Pace Clock.....	20
Lane Times.....	20
Diving .....	20
Dive Number and Position.....	20
Current Round/Current Diver .....	21
Synchronized Swimming.....	21
Award.....	21
All Sports .....	21
Time of Day .....	21

# Introduction

Thank you for purchasing a Colorado Time Systems Wireless Pro Pace Clock/Shot Clock.

## *Introduction*

This introductory chapter describes physical features of your Pro Pace Clock/Shot Clock. Subsequent chapters describe how to set up and use your Pro Pace Clock/Shot Clock in a variety of ways.

## *Pace Clock Operation*

Chapter 2, beginning on page 5, describes how to physically set up single or multiple Pro Pace Clocks for basic pace clock operation.

## *Water Polo*

Chapter 3, beginning on page 7, describes using the units for Water Polo as shot clocks and also for displaying game time and other scoreboard data.

## *Training Modes*

Chapter 4, beginning on page 9, describes the training modes, including what the mode does and which other devices are needed for the mode.

## *Displaying Other Information*

Chapter 5, beginning on page 19, describes using a Pro Pace Clock/Shot Clock to display additional information. The information available for display varies by sport.

---

## How to Set Intensity, Channel and Mode

Make sure the antenna is screwed on. Use the Mode switch on the front panel to set intensity, channel and mode, as follows:

### Intensity

When a Wireless Pro Pace Clock is turned on, the clock will first display **in** and a number for Intensity. While **in** is displayed, the Mode switch adjusts the intensity of the display. Fifteen levels of intensity are available, from 1 (lowest) to 15/16 (highest). Select the desired intensity.

*NOTE:* The initial intensity displayed will be the last setting saved before the clock was turned off. It will not change until the knob is turned for the first time.

## Channel

After the Mode switch has been in the same intensity setting for 4 seconds, the clock will display **CH** for Channel. While **CH** is displayed, the Mode switch changes the wireless transmission/reception channel. All clocks that you want to display the same information must be set to the same channel.

*NOTE:* The initial channel displayed will be the last setting saved before the clock was turned off. It will not change until the knob is turned for the first time.


## Mode

After the Mode switch has been in the same channel setting for 4 seconds, the clock will display the firmware revision, and then the current mode. At this point, the Mode switch changes the mode (and only the mode) until the clock is turned off and then on again.

---

## Physical Connections

The physical connections are on the left side of the front panel.

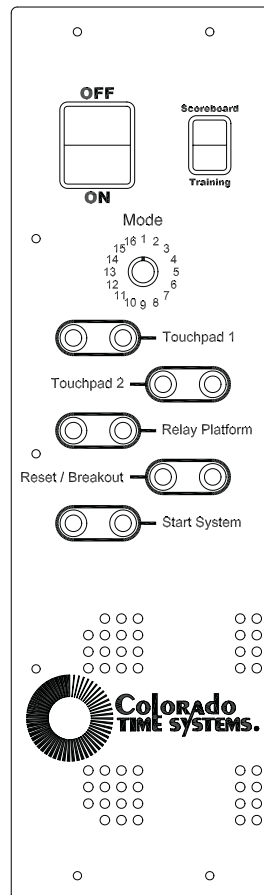

## Scoreboard/Training

When the switch is set to **scoreboard**, and the clock is connected to a timer or controller through the quarter-inch phono plug (RS-232) or the round 4-pin connector (RS-485), the clock will display information from the timer or controller based on the clock's Mode switch setting. See Chapter 3, beginning on page 7, for information that can be displayed for Water Polo, and Chapter 5, beginning on page 19, for other information that can be displayed.

When the switch is set to **training**, the training mode that is selected using the 16-position mode switch will be displayed. The various training modes are described in Chapter 4 beginning on page 9.

## Input Modes

Most of the various training modes require input from one or more of the following: touchpads, relay platform, pushbutton or start system. Plug the device(s) providing the input into the proper connector(s) on the front panel.


Most input connections are self-explanatory.

### Pushbuttons

For all input connectors, a pushbutton operated by a human judge may be connected to provide input; however, some precision in timing will be lost. The pace clock records to a hundredth of a second, but a human with a pushbutton can't come close to that level of accuracy!

### Touchpads

There are two touchpad inputs to allow for touchpad input from both ends of the pool. The touchpad inputs are connected to the same internal signal, so it makes no difference which one is used.

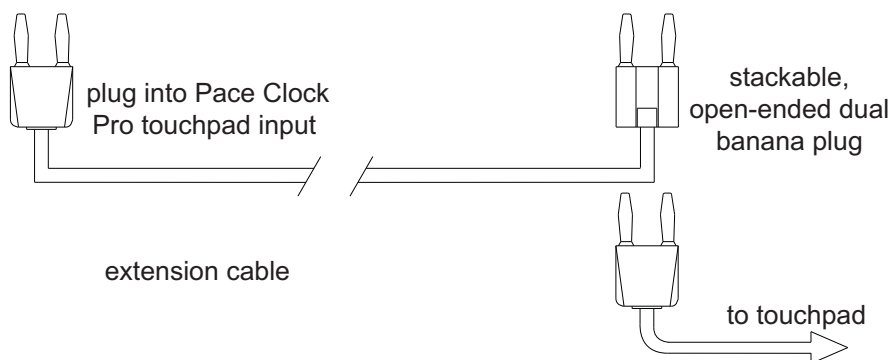

#### Cabling for far end touchpad input

To take input from touchpads at both ends of the pool, plug the touchpad from one end of the pool into either touchpad input on the Pro Pace clock. Plug the touchpad from the other end into the other touchpad input, using an extension cable (CTS SJ series) with a stackable, open-ended dual banana plug.

**Antenna**

To use the clock wirelessly, screw the antenna on.

**Battery**


The internal battery can supply power to the pace clock. A fully charged battery will run the unit for a minimum of 6 hours. Leave the unit plugged in overnight to fully charge the battery after use. The battery charges any time the unit is plugged in to AC power.

**Horn**

The internal horn is controlled by a CTS timer connected to the unit, and requires no user intervention, other than selecting the proper setting on the mode switch, as described in the Water Polo chapter, beginning on page 7.

**Legs**

The pace clock includes legs. If you would like to use the legs, attach them with the hardware included to the threaded mounting holes in the bottom of the clock.

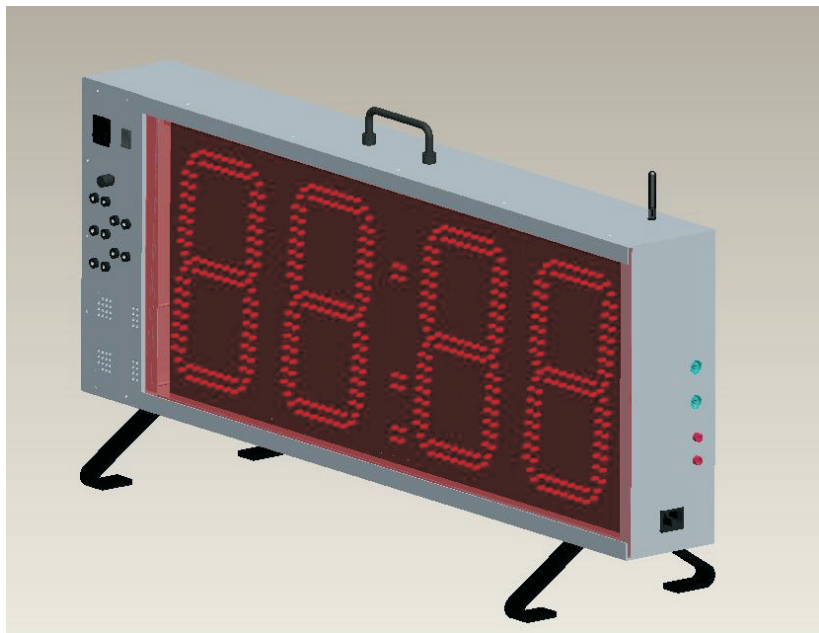

**Data cable connections**

On the right end panel, there are four data cable connectors and a power receptacle. The upper two data cable connections are round, 4-pin connectors for RS-485; the lower two are quarter-inch phono connectors for RS-232.

**AC Power connection**

The power receptacle accepts a standard power cord for 110 VAC. If 220 VAC is required, the power supply can be modified at the factory. Modified units are labeled accordingly.

# Pace Clock Operation

---

## Standalone Pace Clock

For simple pace clock operation, turn the Pro Pace Clock on. Set the Scoreboard/Training switch to Training, and set the Mode switch to 2. The pace clock will display 02 (for mode 2), and then reset itself to :00 and begin counting up. After displaying 59:59, the display rolls over to :00.

---

## Pace Clocks in Series

### Wireless Operation

To run a series of pace clocks wirelessly without an external controller, set the Scoreboard/Training switch on the front panel of the first pace clock to Training. Turn the first clock on, and set the intensity to the desired setting, and make a note of the channel setting. Set the Mode switch to 2 for basic pace clock operation. Other settings will display other information, as described in Chapter 4, starting on page 9.

Set the Scoreboard/Training switch on the other pace clock(s) to Scoreboard. Adjust the intensity if needed, and set the channel to the same channel as the first clock. Set the Mode switch to 1.

Within 5 seconds, the pace clock(s) will be synchronized to the first clock.

### Connected by Data Cables

To run a series of pace clocks connected by cables without an external controller, set the Scoreboard/Training switch on the front panel of the first pace clock to Training, and set the Mode switch to 2. Set the other pace clock(s) to Scoreboard and Mode 1. Connect the pace clocks with data cables using the round 4-pin (RS-485) connectors. All connected pace clocks will display the same information.

Turn the pace clocks on with the power switch on the front panel. The pace clocks will begin counting up from zero, displaying time as

minutes and seconds. After displaying 59:59, the displays will roll over to :00.

## **With Timer or Controller**

A clock or series of clocks can be controlled using a CTS timer or pace clock controller. The clock(s) will display information from the timer or pace clock controller based on the setting of the Mode dial. See Chapter 3 starting on page 7 for specifics about Water Polo, and Chapter 5 starting on page 19 for specifics on other sports.

# Water Polo Operation

Mode Switch Setting	Display
1	Game Clock
3	Shot Clock
5	Time Out Clock
12	Team Scores
16	Time of Day

---

## Physical Setup

Clocks connected to a CTS timer running Water Polo software can be used to display all of the information shown in the chart above.

**Set the Scoreboard/Training switch to Scoreboard.** Connect one clock to the timer through the scoreboard output port with a data cable using either the round 4-pin (RS-485) connector or the quarter-inch phono connector (RS-232), whichever your timer supports. Connect the clocks to each other with the same type of data cable.

Each clock will display the information based on its mode setting: a series of connected clocks will display different information from one another if they are set to different mode settings.

Clocks can also receive information from a System 6 with a wireless adapter; please see the wireless adapter manual for details.

---

## Displaying Information

Clocks can be used to display shot time and other information for Water Polo, with the timer default settings. Connect them as described in Physical Setup. Turn the clock(s) on. Set the Training/Scoreboard switch to Scoreboard. The clock(s) will display information from the CTS timer based on the setting of the Mode dial.

See your CTS timer Water Polo software manual for information about shot time, game time, time out time, team scores or setting time of day.

## **Shot time**

To display shot time on clocks, the CTS timer must be set to display Scoreboard Channel 02 (shot time) on Module 03. Set the Mode switch to 3 on these clocks. The CTS timer will automatically start and stop the shot clocks and sound the horns.

## **Game time**

To display game time on a clock, the CTS timer must be set to display Scoreboard Channel 01 (game time) on Module 01. On this clock, set the Mode switch to 1. The CTS timer will automatically start and stop the game clock and sound the horn at the end of each period.

## **Time out time**

To display the amount of time remaining in a time out on a clock, the CTS timer must be set to display Scoreboard Channel 12 (time out time) on Module 05. On this clock, set the Mode switch to 5. The CTS timer will automatically start and stop the time out clock.

## **Team scores**

To display team scores, the CTS timer must be set to display Scoreboard Channel 5 (team scores) on Module 0D. On this clock, set the Mode switch to 12. The CTS timer will automatically display and update the team scores. By default, the dark team score will be displayed on the two left digits, and the light team score will be displayed on the two right digits. On newer timers, this can be reversed through timer setups.

## **Time of day**

To display the time of day, the CTS timer must be set to display Scoreboard Channel 10 (time of day) on Module 16. On this clock, set the Mode switch to 16. The CTS timer or controller will automatically send the time of day to the clock.

## Training Modes

Mode #	Mode Description	See Page #
1	Lap counter	9
2	Simple pace clock	10
3	Pace clock with cumulative splits	10
4	Pace clock with Lap Splits	11
5	Relay Exchanges	11
6	Start Reaction	12
7	Turn Speed	12
8	Breakout Time	13
9	Start Reaction and Breakout Time	13
10, 11, 12, 13, 14	Single Lane Timer (1, 2, 3, 4 or multiple laps)	14
15	Mid-race Timer	16
16	Test Mode	17

---

### Lap counter

#### *Mode 1*

#### *Equipment required:*

Touchpad required; start system or pushbutton can be used to reset the clock.

#### *Set up:*

Connect the touchpad to either Touchpad input. If using a start system or pushbutton for resetting the display, connect the start system or a pushbutton to the Start System input, or connect a pushbutton to the Reset/Breakout input.

*Operation:*

The clock displays 01, indicating mode 1. The display will flash, and then show 0, indicating 0 laps completed. Each valid touchpad hit will cause the display to count up by 1.

A start input (either a start signal from the start system or one click on a pushbutton connected to the start input) or a double click on a pushbutton connected to the reset/breakout input will reset the counter to 0.

---

## Simple Pace Clock

*Equipment required:*

*Mode 2*

None required for basic operation; start system or pushbutton can be used to reset the clock.

*Set up:*

If using a start system or pushbutton for resetting the clock, connect the start system or a pushbutton to the Start System input, or connect a pushbutton to the Reset/Breakout input.

*Operation:*

The clock displays 02, indicating mode 2. The display will flash, display :00, and begin counting up, showing the time as minutes and seconds. After displaying 59:59, the display will roll over to 00:00. A start input or a double click from the reset input will reset and start the clock.

---

## Pace clock with Cumulative Splits

*Equipment required:*

*Mode 3*

Touchpad required; start system or pushbutton can be used to reset the clock.

*Set up:*

If using a start system or pushbutton for resetting the clock, connect the start system or a pushbutton to the Start System input, or connect a pushbutton to the Reset/Breakout input. Connect the touchpad to either Touchpad input.

*Operation:*

The clock displays 03, indicating mode 3. The display will flash, display :00, and begin counting up, showing the time as minutes and seconds.

At each valid touchpad hit, the display shows the time of the touchpad hit (cumulative split) in seconds and hundredths (SS.HH). Meanwhile, the running time continues internally. Following the cumulative split display the clock will resume displaying the running time as minutes and seconds. Once the running time is above a min-

ute, the time of the touchpad hit is shown alternating between seconds and hundredths (SS.HH) and minutes and seconds (MM:SS).

A start input or a double click from the reset input will reset and start the clock any time the running time is displayed.

---

## Pace clock with Lap Splits

### *Equipment required:*

#### *Mode 4*

Touchpad required; start system or pushbutton can be used to reset the clock.

### *Set up:*

Connect the touchpad to either Touchpad input. If using a start system or pushbutton for resetting the clock, connect the start system or a pushbutton to the Start System input, or connect a pushbutton to the Reset/Breakout input.

### *Operation:*

The clock displays 04, indicating mode 4. The display will flash, display :00, and begin counting up, showing the time as minutes and seconds.

At each valid touchpad hit, the display shows the time of the touchpad hit (lap split) in seconds and hundredths (SS.HH). The running time is reset to 0 at the touchpad hit, and continues running internally. Following the lap split display, the clock will resume displaying the running time as minutes and seconds.

A start input or a double click from the reset input will reset and start the clock any time the running time is displayed.

---

## Relay Exchanges

### *Equipment required:*

#### *Mode 5*

Touchpad and relay judging platform (RJP).

### *Set up:*

Connect the touchpad to either Touchpad input. Connect the RJP to the Relay Platform input.

### *Operation:*

The clock displays 05, indicating mode 5. The numbers on the display go blank, leaving the colon and rightmost decimal lit. The clock is waiting to record a relay exchange.

RJP input times are recorded, and the first touchpad hit is recorded. For a legal relay exchange (the touchpad hit occurred before the relay takeover), the display shows the relay exchange time in seconds and hundredths (SS.HH). For an illegal relay exchange (the

touchpad hit occurred after the relay takeoff), the display shows the difference between the two, preceded by a minus sign. If no valid RJP input is detected within 2 seconds of a touchpad input, "Err" will be displayed on the clock.

The clock displays the exchange time for 10 seconds, and then automatically resets itself for the next exchange.

---

## Start Reaction

### *Mode 6*

#### *Equipment required:*

Start system or pushbutton, and touchpad for backstroke starts or RJP for starting block starts. Optional pushbutton for reset.

#### *Set up:*

Connect the start system or a pushbutton to the Start System input. For backstroke starts, connect the touchpad to either Touchpad input. For starting block starts, connect the RJP to the Relay Platform input. If you would like to use a pushbutton to reset the clock after a start has been recorded, connect a pushbutton to Reset/Breakout.

#### *Operation:*

The clock displays 06, indicating mode 6. The numbers on the display go blank, leaving the colon and the rightmost decimal lit. The clock is waiting for a start input. The start input starts the clock and the display counts up in hundredths of a second for 2 seconds. All touchpad or RJP inputs detected during this time are recorded, and the last one recorded is displayed at the end of the 2-second window.

The start reaction time (the difference between the start input and the swimmer's departure) is displayed until the clock is reset with a double click from the Reset/Breakout input, or a new start input.

If a start input is received and no RJP or touchpad input is detected within 2 seconds, the clock will display "Err."

---

## Turn Speed

### *Mode 7*

#### *Equipment required:*

Touchpad

#### *Set up:*

Connect the touchpad to either of the Touchpad inputs.

#### *Operation:*

The clock displays 07, indicating mode 7. The numbers on the display go blank, leaving the colon and the rightmost decimal lit. The clock is waiting for a touchpad input (typically hand touch). All touchpad releases detected during the next 3 seconds are recorded. The last one recorded (departure) is displayed at the end of the 3-sec-

ond window, showing the time it took for the turn (the difference between the two).

The clock displays the turn time for 10 seconds, and then automatically resets itself for the next turn.

---

## Breakout Time

*Equipment required:*

*Set up:*

*Operation:*

*Mode 8*

Start system, and breakout timer or pushbutton.

Connect the start system to the Start System input, and connect the pushbutton or other breakout timer to the Reset/Breakout input.

The clock displays 08, indicating mode 8. The numbers on the display go blank, leaving the colon and the rightmost decimal lit. The clock is waiting for a start input. The start input starts the clock and the display counts up in hundredths of a second until a breakout input is detected.

The breakout time (the difference between the start input and breakout input) is displayed until the clock is reset with a double click from the Reset/Breakout input, or until a new start input starts the clock from zero.

---

## Start Reaction and Breakout Time

*Equipment required:*

*Set up:*

*Operation:*

*Mode 9*

Start system, breakout timer or pushbutton, and touchpad or relay platform.

Connect the start system to the Start System input, and connect the pushbutton or other breakout timer to the Reset/Breakout input. Connect the touchpad to either Touchpad input or connect the RJP to the Relay Platform input.

The clock displays 09, indicating mode 9. The numbers on the display go blank, leaving the colon and the rightmost decimal lit. The clock is waiting for a start input. The start input starts the clock and the display counts up in hundredths of a second for 2 seconds. All touchpad or RJP inputs detected during this time are recorded, and the last one recorded is displayed at the end of the 2-second window. The clock continues to count internally while it displays this time (start reaction time). Running time resumes on the display, until a breakout/reset input is detected. The breakout time is then displayed

until the clock is reset with a double click from the Reset/Breakout input or a new start input.

---

## Single Lane Timer

Modes: 10, 11, 12, 13 and 14

### 1, 2, 3, 4 or multiple laps with optional Start Reaction Time and optional Relay Exchange Time

#### *Equipment required:*

Start system or pushbutton, and touchpad; relay platform for start reaction time from starting block starts; pushbutton for timing more than 4 laps

#### *Set up:*

Connect the start system or the pushbutton to the Start System input, and connect the touchpad to either Touchpad input.

For start reaction time from starting block starts, connect the RJP to the Relay Platform input. For start reaction time from backstroke starts, inputs from the touchpad that is already connected will be recorded and used.

For mode 14 (multiple lap timing), connect a pushbutton to the Reset/Breakout input.

#### *Operation:*

The clock displays 10, 11, 12, 13 or 14 indicating the mode. These modes are the same except for the number of touchpad inputs expected. In all five of these modes, the numbers on the display go blank, leaving the colon and the rightmost decimal lit. The clock is waiting for a start input. The start input starts the clock and the display counts up in seconds.

#### **Single Lane Timing: Start Reaction**

The first option in all five modes is start reaction time. All touchpad or RJP inputs detected during the initial 2 seconds from start input are recorded, and the last one recorded is displayed at the end of the 2-second window. The start reaction time (the difference between the start input and the swimmer's departure) is displayed, after which the display resumes counting up in seconds.

If there are no touchpad or RJP inputs during the 2 seconds after the start input, the display simply continues to count up in seconds.

**Single Lane  
Timing:  
Lap Timing  
(& Length Timing)**

For lap timing, this assumes that the touchpad is at the same end of the pool as the starting blocks, and therefore the swimmer swims to the other end and back before touching the touchpad. Length timing can also be done, with a touchpad at each end of the pool: one connected to the Pro Pace Clock at Touchpad 1 and the other at Touchpad 2 (see page 3 for cabling this option).

At each valid touchpad input, the display shows the time elapsed since the start input (cumulative split), alternating between seconds (MM:SS) and hundredths (SS.HH). If the elapsed time is less than a minute, the display will not alternate; it will show the time in SS.HH format.

**In mode 10** (single lap timing), the display shows the first elapsed time until a reset or new start input is detected.

**In mode 11** (two lap timing with splits), running time continues internally while the display shows the cumulative split. The display then resumes running time until a second touchpad input is detected, indicating a second lap completed. This final time is displayed until a reset or a new start input is detected.

**In mode 12** (three lap timing with splits), running time continues internally while the display shows the cumulative split. The display then resumes running time after displaying each cumulative split until the third touchpad input. This final time is displayed until a reset or a new start input is detected.

**In mode 13** (four lap timing with splits), running time continues internally while the display shows the cumulative split. The display then resumes running time after displaying each cumulative split until the fourth touchpad input. This final time is displayed until a reset or a new start input is detected.

**In mode 14**, running time continues internally while the display shows the cumulative split. The display then resumes running time after displaying each cumulative split until a single Reset input is detected. The clock then stops timing after the next touchpad hit. This final time is displayed until a reset or a new start input is detected.

**Single Lane  
Timing:  
Relay Exchange  
Timing**

All Single Lane Timing Modes with multiple laps (or lengths, if length timing is being done) have optional relay exchange timing capabilities at each touchpad hit before the final one.

The first touchpad hit (cumulative split) is recorded, disabling the touchpad and starting a 2-second window. During the 2-second window, RJP input times continue to be recorded. After the 2-second

window expires, RJP input will be disabled and the cumulative split will be displayed.

If a valid RJP input was detected, the display will then show the relay exchange time. For a legal relay exchange (the touchpad hit occurred before the relay takeoff), the display will then show the relay exchange time in seconds and hundredths (SS.HH). For an illegal relay exchange (the touchpad hit occurred after the relay takeoff), the display shows the difference between the two, preceded by a minus sign.

If no valid RJP input is detected within 2 seconds before or after a touchpad input, only the cumulative split will be displayed on the clock, as described in the Lap & Length Timing section above.

---

## Mid-Race Timing

### *Mode 15*

Mid-race timing is designed to time the middle portion of a race, eliminating both the start and the finish. It can be done with touchpads at both ends of the pool, or only at one end.

- 1) With a touchpad at one end only, the timing will include one lap and three turns.
- 2) With a touchpad at each end, the timing will include one length and two turns.

### *Equipment required:*

Start system or pushbutton, and touchpad(s).

### *Set up:*

Connect the pushbutton to the Reset/Breakout input, or connect the start system or a pushbutton to the Start System input. If using one touchpad, connect it to either Touchpad input. If using touchpads at both ends of the pool, connect the touchpad from one end of the pool into either touchpad input on the Pro Pace clock. Plug the touchpad from the other end into the other touchpad input, using an extension cable (CTS SJ series) with a stackable, open-ended dual banana plug (see page 3).

### *Operation:*

The clock displays 15, indicating mode 15. The numbers on the display go blank, leaving the colon and the rightmost decimal lit. The clock is waiting for a touchpad input (first hit of turn). The first touchpad input starts the clock, and the display begins counting up in hundredths of a second. The touchpad input is inactive for 3 seconds after the first hit, to allow the swimmer to exit the pad.

The clock records the next touchpad hits. The last one recorded (push off) is compared with the initial touchpad touch and the difference between the two is displayed.

With a touchpad at one end, this is the time it took the swimmer to make an initial turn, swim down the lane, turn at the other end, swim back and complete the turn at the end with the touchpad.

With a touchpad at each end, this is the time it took the swimmer to make an initial turn, swim down the lane and complete the turn at the other end.

The clock displays the mid-race time until the clock is reset with a double click from the Reset/Breakout input, or a start input.

---

## Test Mode

*Equipment required:*

*Set up:*

*Operation:*

*Mode 16*

Depends upon testing.

Follow specific instructions from CTS customer service representative.

The clock displays 16, indicating mode 16. It will then cycle through a digit test. Note that the decimal after the third digit is never used, and will not light during the digit test.

Input ports can also be tested. When an input port receives a signal the clock shows which input port was triggered, as shown:

Touchpad	PAd
RJP	rJP
Start	StArt
Reset/Breakout	rESET

## *Training Modes*

## Scoreboard Modes

Mode Switch Setting	Sport	Display
1-10	Swimming & Training Pace Clock	Lane Times
11	Swimming	Event/Heat
13	Diving	Dive Number and Position
14	Diving	Current Round/Current Diver
15	Synchro	Award
16	All	Time of Day

*For details about displaying Water Polo information, please see Chapter 3, beginning on page 7.*

---

### Physical Setup

A pace clock or series of pace clocks can be controlled using a CTS timer or pace clock controller. The connected clock(s) will display information based on the setting of the Mode dial on the clock, as listed in the chart above, and the sport the timer is running.

Set the Scoreboard/Training switch to Scoreboard. Connect one pace clock to the timer at the timer's scoreboard output port, or connect it to the pace clock controller. Use a data cable with either a round 4-pin (RS-485) connector or a quarter-inch phono connector (RS-232), whichever your timer or controller supports. If you are connecting multiple pace clocks, connect the pace clocks to each other with the same type of data cable.

Each clock will display the information based on its mode setting; a series of connected clocks can display different information from one another if they are set to different mode settings.

Clocks can also receive information from a System 6 with a wireless adapter; please see the wireless adapter manual for details.

## Swimming

### Lane Times

*Modes 1 - 10*

Connect the clock(s) to a CTS timer running Swimming software. When a clock is switched to one of the modes 1 through 10, it will briefly display the mode number (01 through 0A). It will then display the minutes and seconds for the corresponding lane, either running time or split time.

### Event/Heat

*Mode 11*

Connect the clock(s) to a CTS timer running Swimming software. When a clock is switched to mode 11 it will briefly display E: H for Event/Heat. It will then display the current event number on the left two digits and the current heat number on the right two digits.

---

## Training Pace Clock

### Lane Times

*Modes 1 - 10*

Connect the clock(s) to a CTS timer running Pace Clock software, or to a Pace Clock Controller. When a clock is switched to one of the modes 1 through 10, it will briefly display the mode number (01 through 0A). It will then display the time for the current lane.

---

## Diving

### Dive Number and Position

*Mode 13*

Connect the clock(s) to a CTS timer running Diving software. When a clock is switched to mode 13, it will briefly display **dn** for Dive Number. It will then display the dive number and position for the current diver. If the dive number is 4 characters long (e.g., 101B or 403C), the display will show the entire dive number. If the dive number is 5 characters long (e.g., 5132D or 6142B), the display will alternate between the first four characters and the final character on a half second basis.

## Current Round/Current Diver

### *Mode 14*

Connect the clock(s) to a CTS timer running Diving software. When a clock is switched to mode 14, it will briefly display **r: d** for Round and Diver. It will then display the current round number on the left two digits and the current diver number on the right two digits. This mode is helpful for large meets so that divers who may not be able to see the main scoreboard easily can still see the current state of the event and know when they will be diving again.

---

## Synchronized Swimming

### Award

### *Mode 15*

Connect the clock(s) to a CTS timer running Synchronized Swimming software. When a clock is switched to mode 15, it will briefly display **SY** for Synchro. It will then display the tabulated award for the current routine to the hundredths place (it will not show the thousandths place).

---

## All Sports

### Time of Day

### *Mode 16*

Connect the clock(s) to a CTS timer running any sport's software, or to a Pace Clock Controller. When a clock is switched to mode 16, it will briefly display **tod** for Time of Day. It will then display the current time of day as set on the timer or controller.



Sales: **1-800-279-0111 or 1-970-667-1000**  
Service: **1-800-287-0653, x256 or 1-970-667-1000**  
FAX: **(970) 667-1032**

Web: [www.coloradotime.com](http://www.coloradotime.com)  
Email: [customerservice@coloradotime.com](mailto:customerservice@coloradotime.com)

Colorado Time Systems  
1551 East 11th Street  
Loveland, CO 80537 USA